

LG Aria Digital Key Telephone

4 Button Quick Reference User Guide (LDP-7004)



FEATURE	INSTRUCTION
MAKE AN INTERNAL CALL	Dial the extension number Ie. "102"
SELECT A LINE	Dial "0"
DIAL THE ATTENDANT	Dial "9"
TRANSFER A CALL	"TRANS/PGM" Ext.No. Hang-up or wait for an answer then hang-up. Or press the DSS button Hang-up (DSS=direct station selection)
CALL PARKING	Dial "TRANS/PGM" 601-619 (RETRIEVE CALL: dial 601-619) Note: Most features can be accessed via the menu. Press TRANS/PGM scroll up & down by the volume keys. Make your selection by pressing the relevant digits
BGM (Back Ground Music)	"TRANS/PGM" "73" (channel 01-12, 00 to cancel) "Hold/Save"
CALL FORWARD	Dial 554 1=fwd all,2=busy,3=no ans,4=busy/no ans,5=off-net, 6= off-net no ans, 0=follow me (add # for VMIB)
CANCEL FORWARD	554 #
CHANGE INTERCOM MODE	TRANS/PGM 12 1=Hands free, 2=Tone ring, 3=Private mode SAVE
CHANGE RING TONE	TRANS/PGM 11 1-4 HOLD/SAVE.
EXCLUSIVE HOLD	HOLD HOLD
PAGEALL	#00 INTERNAL: dial #5 EXTERNAL: dial #9
PICKUP	** Direct Pickup: *7 Ext.No
LAST NUMBER REDIAL	Press SPEED *
PROGRAM FLEXIBLE BUTTONS	Press "TRANS/PGM", press programmable flexible button, Dial "extension number or a number below", press "HOLD/SAVE", press programmable flexible button <ul style="list-style-type: none"> ▪ To Program CONF button "91" ▪ To Program DND/FWD button "93" ▪ To Program CALL BACK button "92" ▪ To Program MUTE button "95" ▪ To Program REDIAL button "97"