
## LG Aria Digital Key Telephone 8 Button Quick Reference User Guide (LDP-7008)

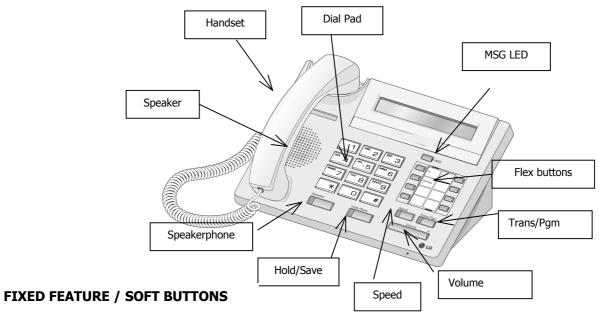



- **SPEED** button provides you with access to speed dialing, save number redial and last number redial.
- TRANS/PGM (TRANSFER) button is used to transfer an outside call from a station to another.
- CALLBK (CALLBACK) button allows you to leave a callback indication at a station that is busy, unattended, or in Do Not Disturb.
- DND/FWD (Do Not Disturb/Forward) button allows you to forward your calls to another destination, or make DND mode.
- VOLUME A bar allows you to adjust speakerphone and handset volume.

- **SPEAKER** button enables you to make a phone call without lifting handset. It turns the telephone on and off when using the speakerphone.
- HOLD button enables you to place an outside caller on hold.
- PROGRAM FLEXIBLE BUTTONS Press "TRANS/PGM",

press programmable flexible button, Dial "extension number or number below", press "HOLD/SAVE", press programmable flexible button

To Program CONF button "91" To Program CALL BACK button "92" To Program REDIAL button "97" To Program DND/FWD button "93" To Program MUTE button "95"

FEATURES					
MAKE AN INTERNAL CALL	Dial the extension number Ie. "102"				
SELECT A LINE	Dial "0"				
DIAL THE ATTENDANT	Dial "9"				
TRANSFER A CALL	"TRANS/PGM" Ext.No. Hang-up or wait for an answer then hang-up.				
	Or press the DSS button Hang-up (DSS=direct station selection)				
CALL PARKING	Dial "TRANS/PGM" 601-619 (RETRIEVE CALL: dial 601-619)				
	<b>Note:</b> Most features can be accessed via the menu. Press "TRANS/PGM"				
	scroll up & down by the volume keys. Make your selection by pressing				
	the relevant digits				
BGM (Back Ground Music)	"TRANS/PGM" 73 (channel 01-12, 00 to cancel) "Hold/Save"				
CALL BACK	"CALLBACK" (call-back a busy or no answer extension.)				
CALL FORWARD	Dial 554 1=fwd all,2=busy,3=no ans,4=busy/no ans,5=off-net,				
	6= off-net no ans, 0=follow me (add # for VMIB)				
CANCEL FORWARD	554 #				
CHANGE INTERCOM MODE	"TRANS/PGM" "12" 1=Hands free, 2=Tone ring, 3=Private mode SAVE				
CHANGE RING TONE	"TRANS/PGM" "11" 1-4 HOLD/SAVE.				
HEADSET MODE	"TRANS/PGM" "75" 1:Speaker 0:Headset "HOLD/SAVE"				
PAGEALL	#00 INTERNAL: dial #5 EXTERNAL: dial #9				
PICKUP	** Direct Pickup: *7 Ext.No				
PROGRAM DSS KEYS	"TRANS/PGM" DSS (flex buttons) dial code or Ext.no. "HOLD/SAVE"				
LAST NUMBER REDIAL	Press "SPEED" "*"				